
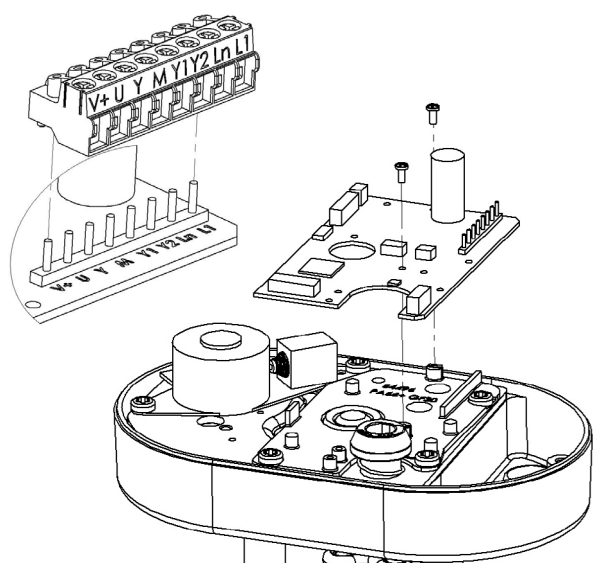



PARTI DI RICAMBIO / SPARE PARTS

Codice scheda / Circuit board model	Modello attuatore / Actuator model
MVECS506	MVE506 - MVE506S
MVECS510	MVE510 - MVE510S
MVECS515	MVE515 - MVE515S
MVECS522	MVE522 - MVE522S
MVECS206	MVE206 - MVE206S
MVECS210	MVE210 - MVE210S
MVECS215	MVE215 - MVE215S
MVECS222	MVE222 - MVE222S

- Disconnettere l'alimentazione principale;
Disconnect main power supply;
- Disconnettere il cavo del solenoide e del motore;
Disconnect solenoid and motor cable;
- Rimuovere la morsettiera estraibile;
Remove the removable terminal block;
- Rimuovere le viti e sostituire la scheda;
Remove the screws and replace the circuit board;
- Riconnettere il cavo del solenoide e del motore e reinserire la morsettiera;
Connect again the solenoid and motor cable and place the removable terminal block;
- Effettuare l'apprendimento manuale tramite dip switch 7.
Carry out manual calibration using dip switch 7.

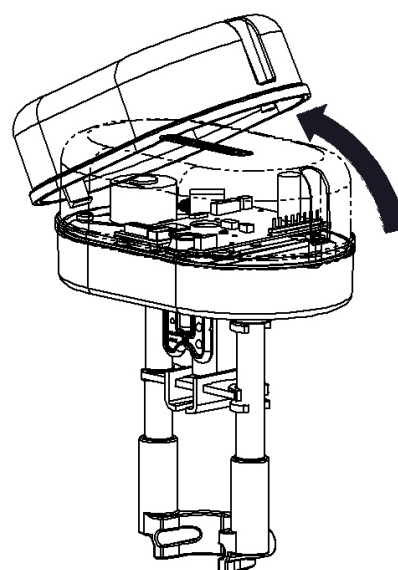

Valido per /valid for
MVE506-506S-510-510S-515-515S-522-522S

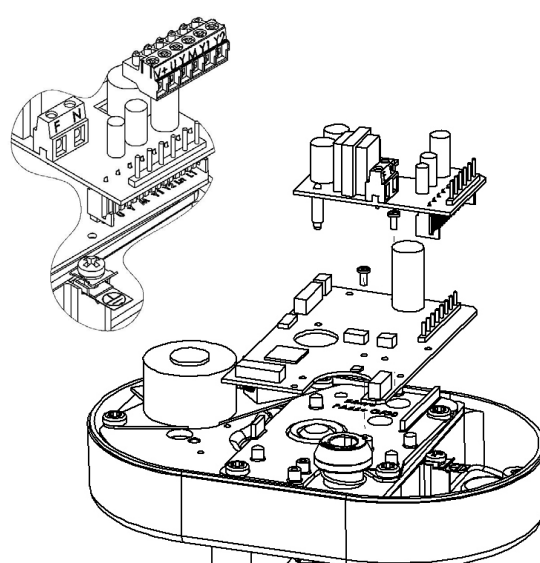

Valido per /valid for
MVE206-206S-210-210S-215-215S-222-222S